

PFX-5307 Surface Mount Down light / Cylinder Installation Instructions




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

IMPORTANT

1. Read all instructions.
2. Install in accordance with national and local electrical code regulations.
3. This product is intended to be installed and serviced by a qualified, licensed electrician.
4. Do not install in wet locations. For dry and damp use only.
5. Turn off electrical power before installing or servicing fixture in any way.
6. To reduce the risk of fire and overheating, make sure all connections are tight.
7. Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.



INSTALLATION

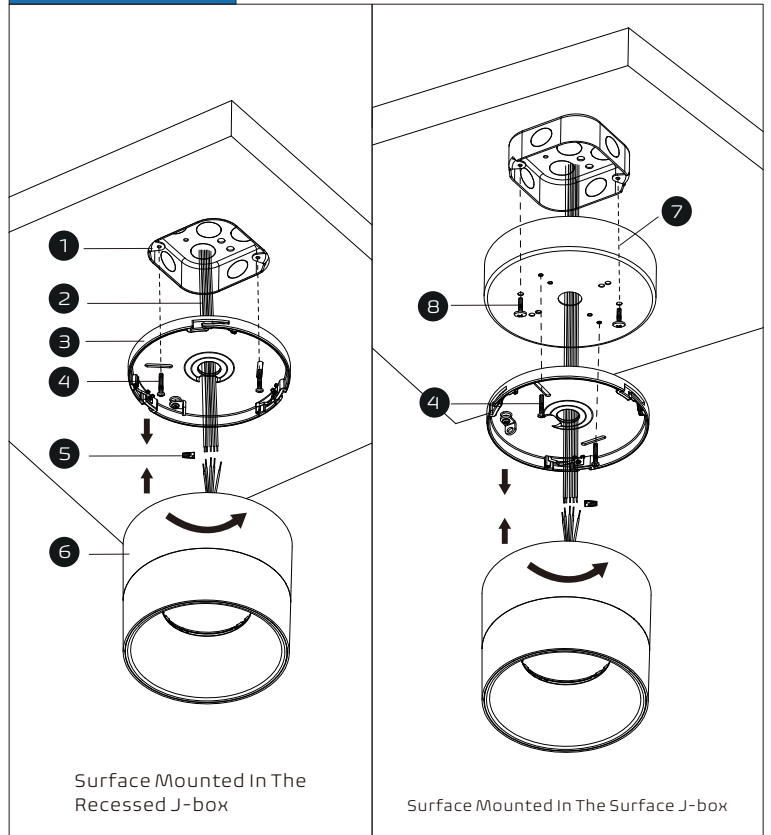

WIRING

		LUMINAIRE	
LINE	●	LINE-BLACK	—
GREEN	●	GROUND-GREEN	—
NEUTRAL	●	NEUTRAL-WHITE	—
DIM (+) VIOLET	●	VIOLET	—
DIM (-) PINK	●	PINK	—

STRUCTURE OF LAMP

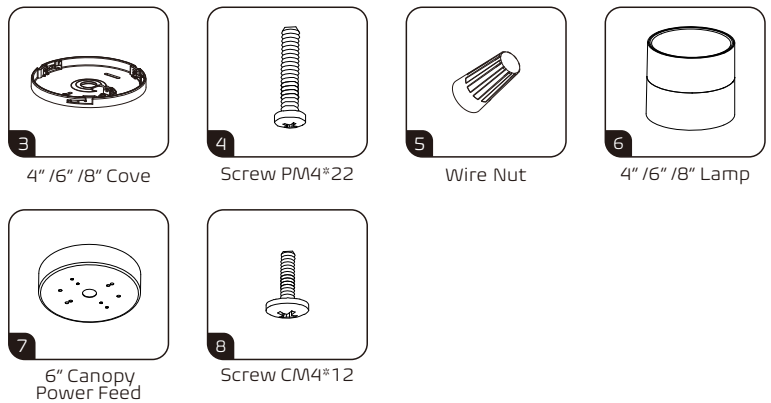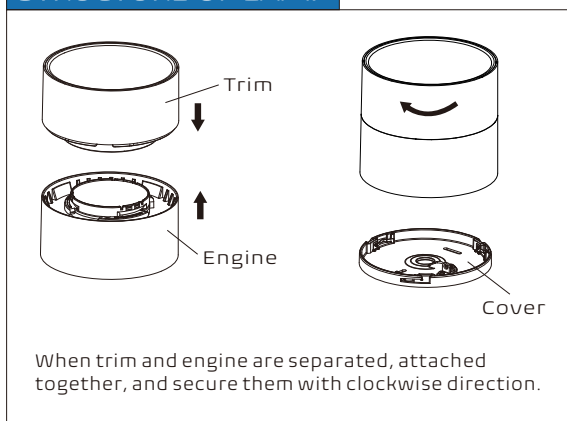

PARTS

- 1 4" Octagon Junction Box (By Others)
- 2 Power Cord (By Others)
- 3 4" /6" /8" Cove
- 4 Screw PM4*22
- 5 Wire Nut
- 6 4" /6" /8" lamp
- 7 6" Canopy Power Feed
- 8 Screw CM4*12

! ATTENTION: Install in accordance with national and local building and electrical codes.

Page 1



PARAFLEX does not warrant or represent that the information is free from errors or omission. The information may change without notice and PARAFLEX is not in any way liable for the accuracy of any information printed and stored or in any way interpreted or used.

PFX-5306 Pendant Mount Down light / Cylinder Installation Instructions




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


► 4" Pendant With Cable

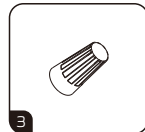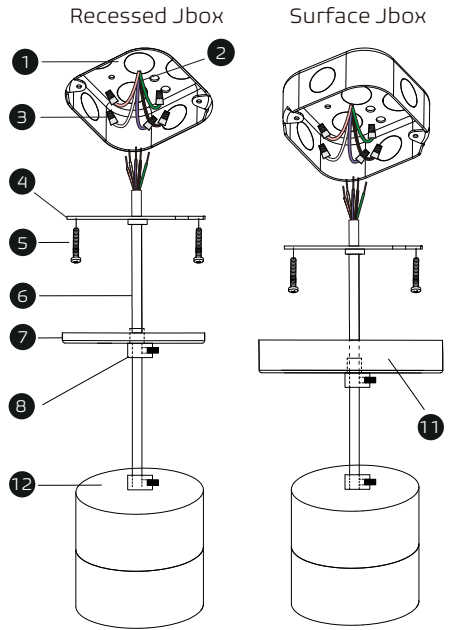


Wire Nut

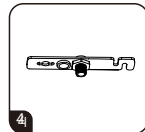


Junction Box Crossbar

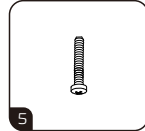


Screw PM4*22

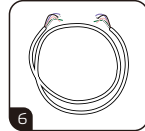

Power Cord

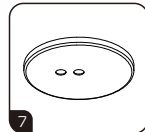


4" Canopy Power Feed

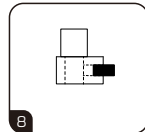

Cable Clip





Cable Holder

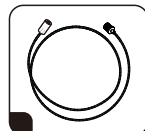


Aircraft Cable

► 6" And 8" Pendant With Cable

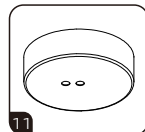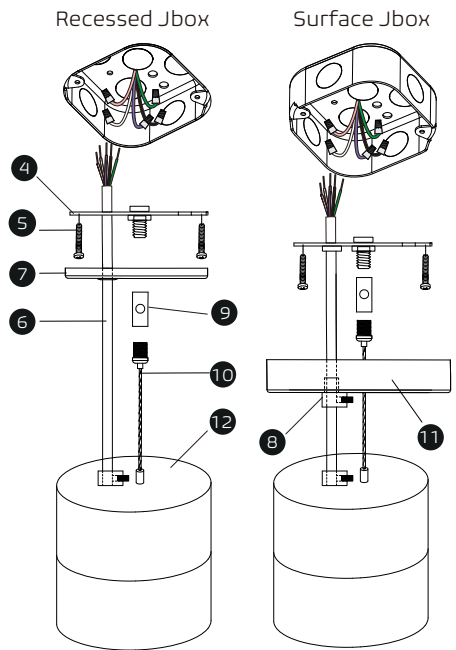

6" Canopy Power Feed


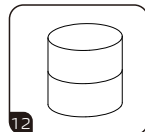


4" /6" /8" Lamp


► PARTS

- 1 4" Octagon Junction Box (By Others)
- 2 Power Cord (By Others)
- 3 Wire Nut
- 4 Junction Box Crossbar
- 5 Screw PM4*22
- 6 Power Cord
- 7 4" Canopy Power Feed
- 8 Cable Clip
- 9 Cable Holder
- 10 Aircraft Cable
- 11 6" Canopy Power Feed
- 12 4" /6" /8" Lamp


► Pendant With Stem

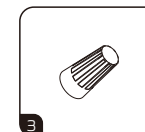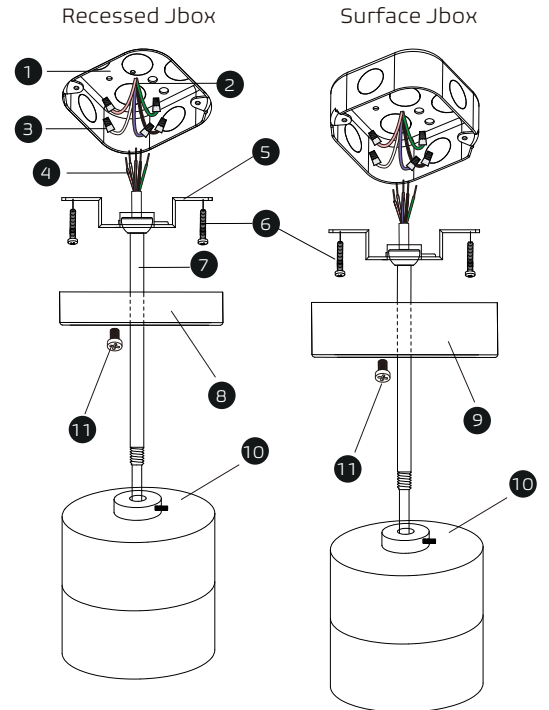


Wire Nut

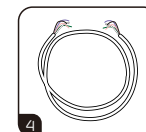


Power Cord

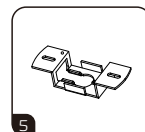


Junction Box Crossbar

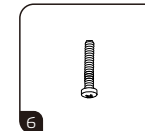


Screw PM4*22

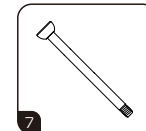


Stem Kits

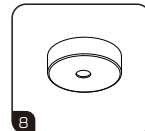


4" Stem Canopy Kits

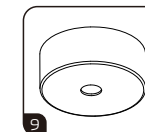

6" Stem Canopy Kits

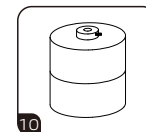

4" /6" /8" Lamp

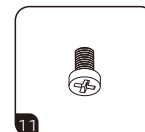

Screw PM3*5

► PARTS

- 1 4" Octagon Junction Box (By Others)
- 2 Power Cord (By Others)
- 3 Wire Nut
- 4 Power Cord
- 5 Junction Box Crossbar
- 6 Screw PM4*22
- 7 Stem Kits
- 8 4" Stem Canopy Kits
- 9 6" Stem Canopy Kits
- 10 4" /6" /8" Lamp
- 11 Screw PM3*5

! ATTENTION: Install in accordance with national and local building and electrical codes.

Page 2

PARAFLEX does not warrant or represent that the information is free from errors or omission. The information may change without notice and PARAFLEX is not in any way liable for the accuracy of any information printed and stored or in any way interpreted or used.